

COMMAND	ACTION
PUT OVER/PASS (line number)	Pass the specified line to the pier and provide enough slack to allow line handlers to place the line over the bitt, cleat or bollard.
HOLD (line number)	Do not let any more line out even though the risk of parting may exist.
CHECK (line number)	Hold heavy tension on the specified line but render it as necessary to prevent parting the line.
SURGE (line number)	Hold moderate tension on a line but render it enough to permit movement of the ship.
EASE (line number)	Let a line out until it is under less tension, but not slacked.
SLACK (line number)	Take all tension off a line.
TAKE THE SLACK OUT OF (line number)	Take all the slack out of a line, but do not take a strain.
SHIFT (line number)	Move a line to the specified location.
HEAVE AROUND ON (line number)	Take a strain on a line.
TAKE (line number) TO POWER	Take the specified line to the capstan or gypsy head.
SINGLE UP (line number)	Take in all but one bight so there remains a single part to the line. May also be used to single up all normal mooring lines.
DOUBLE UP (line number)	Pass an additional bight on the specified line so there are three parts to the line. This may also be used to double up all normal mooring lines. Cutters without sufficient mooring line for three parts should just pass the bitter end of the single up to the pier.